


INSTALLATION SHEET

Attic Application (underside of rafters)

PRODUCT: Solid or Perforated Radiant Barrier

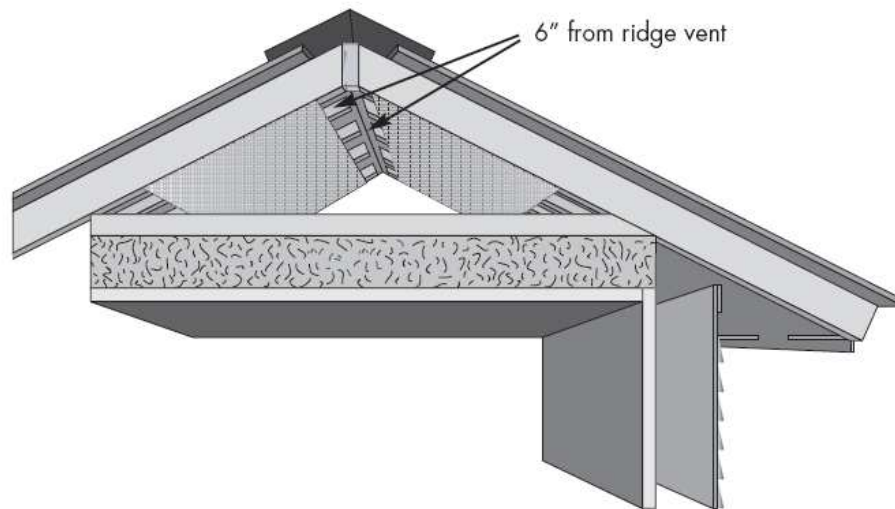

Benefits:

- Quick, clean and easy to install
- Reduces heat loss in the winter and heat gain in the summer
- Unaffected by condensation and humidity
- Excellent vapor barrier

Installation Method:

1. Always use caution when working in an attic. Watch your step and use walking boards over the attic floor framing.
2. Measure the rafter length from ridge to attic floor. (If using the Solid Radiant Barrier be sure to leave a 6" gap on each end for adequate ventilation.)
3. Cut the Reflective Radiant Barrier to the length of your measurement. Tip: For safety, cut the material in a secure open room on the main level then carry the cut portion to the attic for installation.
4. Staple the sheet of Radiant Barrier every 4" to 6" across the underside of the rafters.

