


INSTALLATION SHEET

Basement Wall

PRODUCT: Double Bubble Foil/Foil Insulation

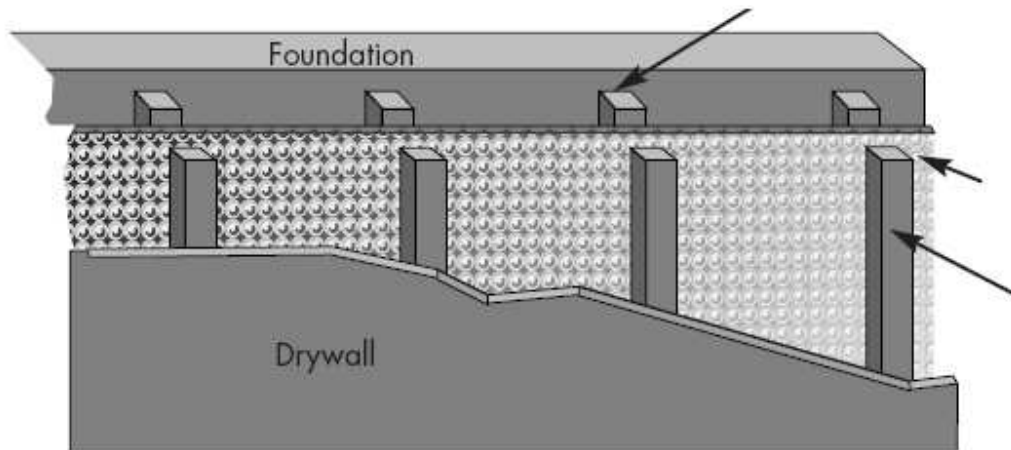

Benefits:

- Quick, clean and easy to install
- Reduces Radiant Heat loss/gain and adds R-Value
- Unaffected by condensation and humidity
- Excellent Vapor Barrier

Installation Method:

1. Fasten 2"x2" furring boards to concrete wall using concrete anchors
2. Staple the Double Bubble Foil Insulation across the 2"x2" furring boards leaving an air space between the wall.
3. Seal the seams with Reflective Foil Tape
4. Fasten 2"x2" furring boards over the Double Bubble Foil Insulation, again leaving air space between.
5. Attach drywall or other paneling as typically installed.

Not: Be sure to use the Perforated Radiant Barrier for adequate ventilation of moisture vapor.

