


# INSTALLATION SHEET

## House Wrap

**PRODUCT:** Reflective House Wrap Radiant Barrier (Perforated)

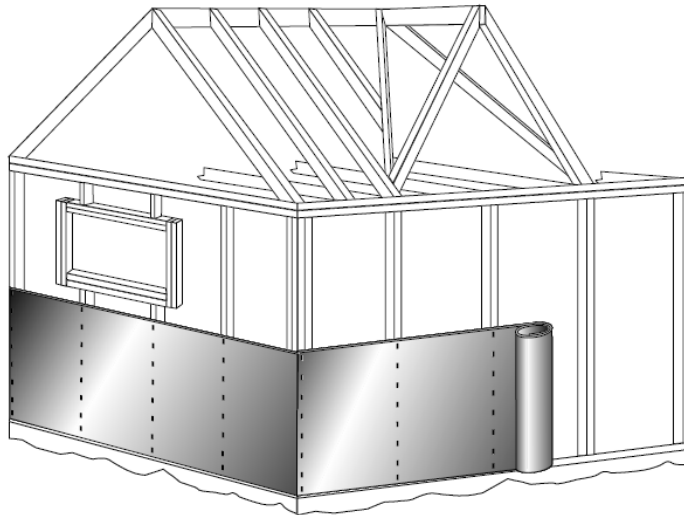

### **Benefits:**

- Quick, clean and easy to install
- Strong and lightweight
- Provides reflective barrier against heat gain or loss
- Excellent air barrier
- Unaffected by moisture and humidity

### **Installation Method:**

1. Start by stapling one side of a roll of Reflective House Wrap at a corner of the building.
2. Unroll the Reflective House Wrap along the exterior wall, stapling to studs or sheathing as you unroll it.
3. Wrap foil completely around entire structure covering all openings, plates, sills and corners. Cut out openings in an "X" pattern, then staple excess fabric inside of opening.

**Tip:** Always be sure to pull Reflective House Wrap tight while fastening to structure.