


INSTALLATION SHEET

Post Frame Building-Retrofit

PRODUCT: Double Bubble Foil/Foil or White/Foil Insulation

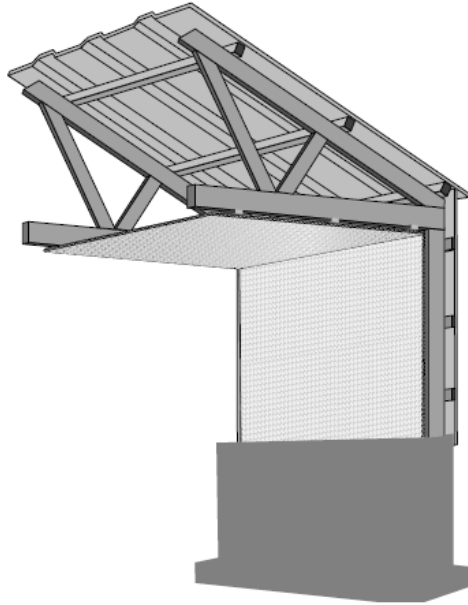

Benefits:

- Quick, clean and easy to install
- Reduces Radiant Heat loss/gain and adds R-Value
- Unaffected by condensation and humidity
- Excellent Vapor Barrier

Installation Method:

1. If trusses or wall posts are 48" or greater on center, add wood furring strips at 24" horizontally across wall posts and trusses.
2. Unroll Double Bubble Insulation in the direction of the furring strips and staple into place.
3. Seal all seams with Reflective Foil/White Tape.