


INSTALLATION SHEET

Radiant Heat Over Wood Floor

PRODUCT: Under Concrete Reflective Radiant Barrier

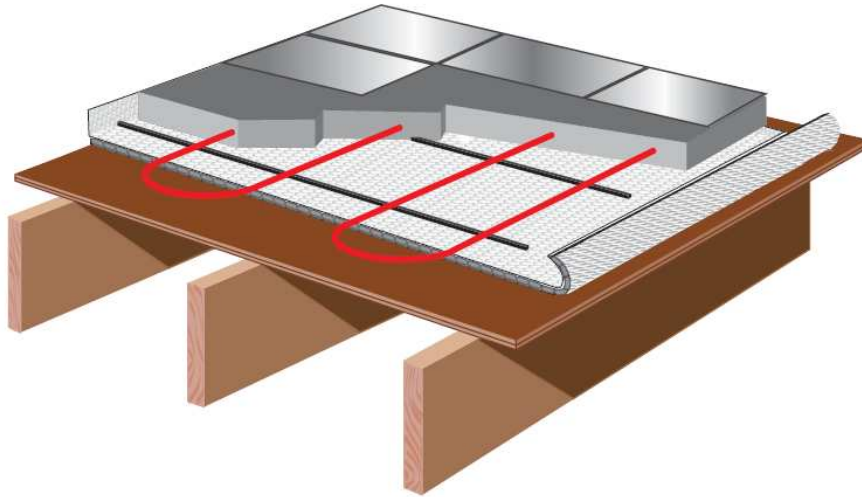

Benefits:

- Quick, clean and easy to install
- Reduces Radiant Heat loss/gain and adds R-Value
- Increases heating system efficiency
- Excellent Vapor Barrier
- Helps radiate heat in required direction

Installation Method:

1. Unroll Under Concrete Foil Insulation Barrier and cut to fit flush to walls.
2. Tightly butt all the seams.
3. Seal the seams with Reflective Foil/White Tape.
4. Install Radiant Heating system and pour concrete over top as typically installed.