


INSTALLATION SHEET

Radiant Heat with a Sub-Floor

PRODUCT: Under Concrete Barrier Insulation

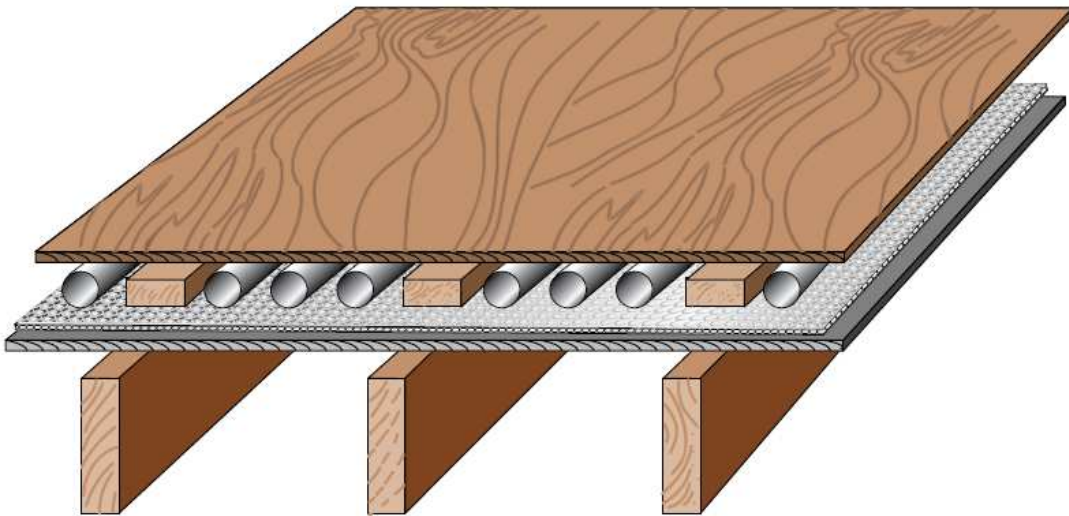

Benefits:

- Quick, clean and easy to install
- Reduces Radiant Heat loss/gain and adds R-Value
- Increases heating system efficiency
- Excellent Vapor Barrier
- Helps radiate heat in required direction

Installation Method: 1

1. Unroll 48" wide Under Concrete Barrier on top of floor and tack into place.
Tip: Extend Under Concrete Barrier up the wall to the height the finished floor will be.
2. Seal the seams and perimeter using Reflective Foil Tape.
3. Install Radiant Heating system and plywood floor as typically installed.