


BENEATH A CONCRETE SLAB: R-3.8

- HELPS TO REDUCE BASEMENT DAMPNES AND INCREASES COMFORT
- REDUCES HEAT LOSS TO THE GROUND BELOW
- EXCELLENT VAPOR AND RADON BARRIER
- COMPRESSIVE STRENGTH OF 140 PSI
- QUICK AND EASY TO INSTALL - HELPS TO KEEP FLOOR WARM

INSTALLATION METHOD

1. Unroll EcoFoil® under concrete over gravel, dirt, or alternative sub-material, prior to concrete pour.
2. Seal the seams and butt joints using EcoFoil® white tape - ensuring a continuous vapor barrier.
3. Proceed with the concrete pour as per the usual method.

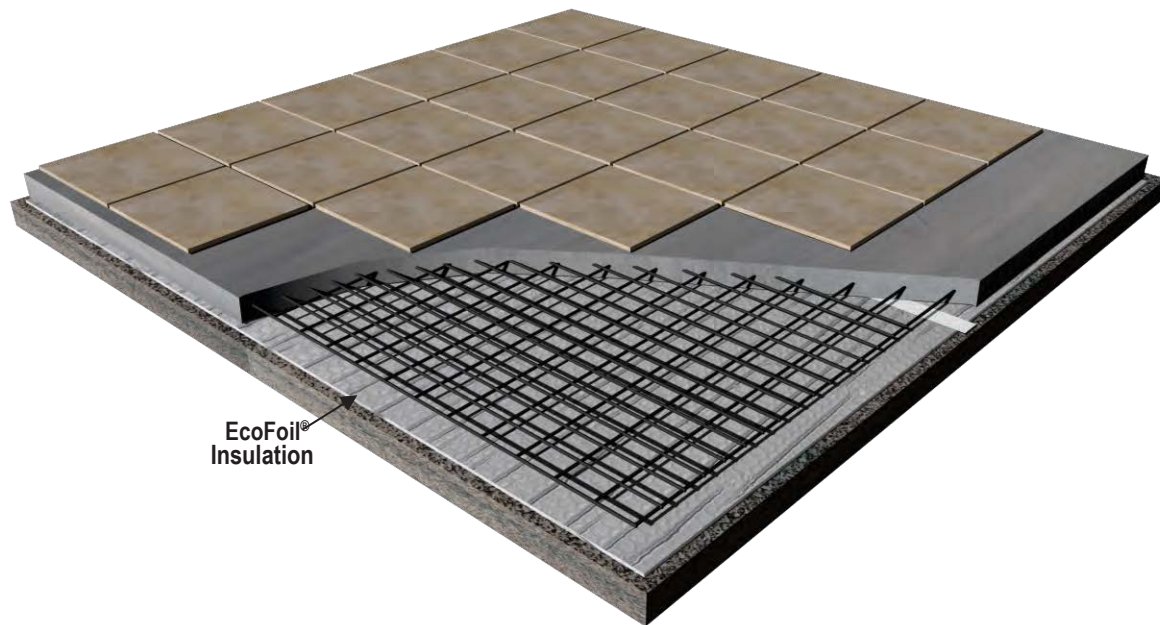

SUGGESTED PRODUCTS FOR THIS APPLICATION:

EcoFoil® Insulation Product	EF1620 (Available in Various Dimensions)
EcoFoil® Tape	EF15853 (White Poly)

- a) Check local building codes for compliance before installation. This installation sheet is intended solely to illustrate the proper location and placement of EcoFoil® Reflective Insulation products in specific constructions applications. They are not intended to illustrate proper construction methods (which is ultimately the responsibility of the builder or contractor). The installation instructions are only recommendations relating to the location and placement of EcoFoil® Reflective Insulation products and EcoFoil® makes no claims that these construction systems are universally accurate.
- b) All warranties are void if EcoFoil® Reflective Insulation products are used in exterior applications, or in non-enclosed systems or buildings.
- c) Exercise caution when using EcoFoil® Reflective Insulation products near and around electrical wiring and devices.

