


**WALL
(FURRING STRIPS OVER BLOCK WALL)**

- HELPS TO REDUCE BASEMENT DAMPNES AND INCREASES COMFORT
- REDUCES HEAT LOSS TO THE SURROUNDING ENVIRONMENT
- EXCELLENT VAPOR AND RADON BARRIER
- UNAFFECTED BY MOISTURE AND HUMIDITY
- QUICK AND EASY TO INSTALL

INSTALLATION METHOD

1. Fasten 1" - 2" thick furring strips to wall with shot fasteners or lag bolts.
2. Unroll EcoFoil® insulation parallel and staple to the furring strips.
3. Seal seams with reflective or white tape.

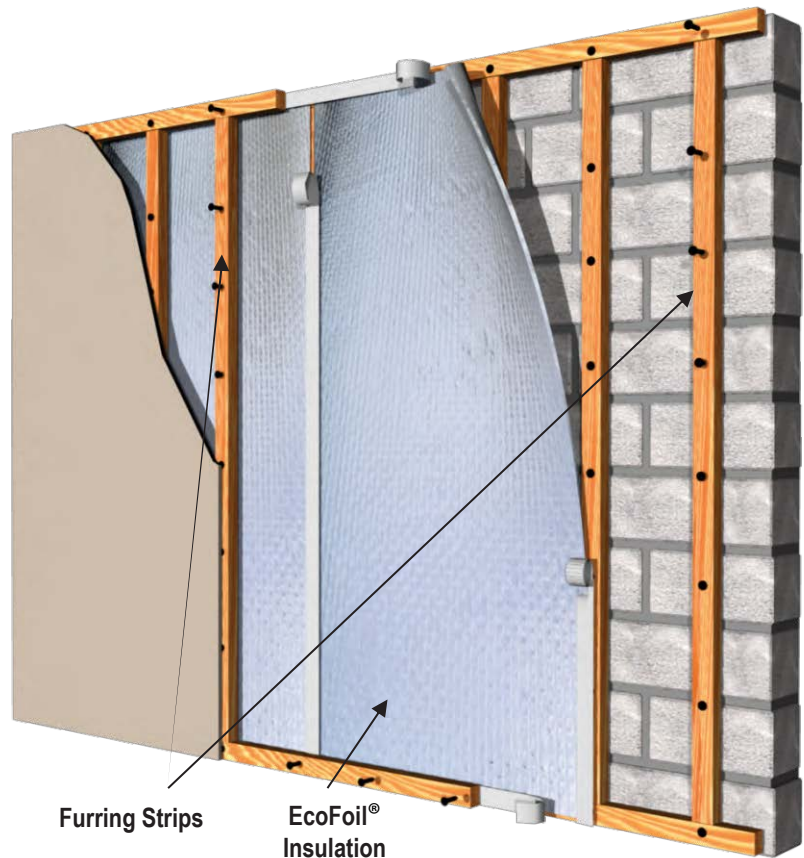

SUGGESTED PRODUCTS FOR THIS APPLICATION:

EcoFoil® Insulation Product	EF2210, EF2510, EF2220, EF2522 (Available in Various Dimensions)
EcoFoil® Tape	EF15853 (White) or EF15073 (Reflective)

- a) Check local building codes for compliance before installation. This installation sheet is intended solely to illustrate the proper location and placement of EcoFoil® Reflective Insulation products in specific constructions applications. They are not intended to illustrate proper construction methods (which is ultimately the responsibility of the builder or contractor). The installation instructions are only recommendations relating to the location and placement of EcoFoil® Reflective Insulation products and EcoFoil® makes no claims that these construction systems are universally accurate.
- b) All warranties are void if EcoFoil® Reflective Insulation products are used in exterior applications, or in non-enclosed systems or buildings.
- c) Exercise caution when using EcoFoil® Reflective Insulation products near and around electrical wiring and devices.

